

 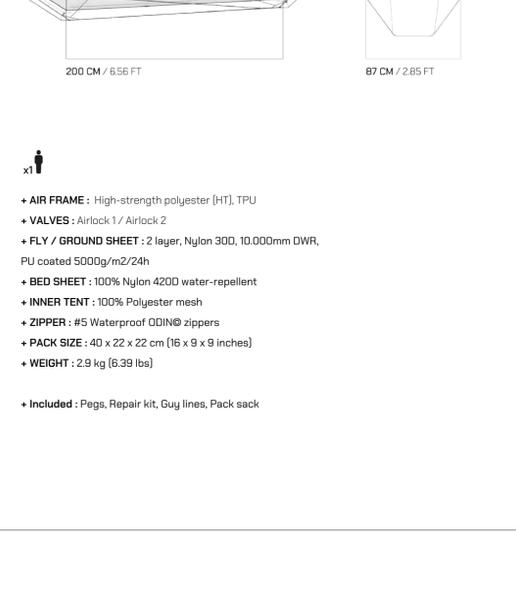


- ① AIR FRAME
- ② INNER TENT
- ③ FLY SHEET
- ④ AIRLOCK 2
- ⑤ AIRLOCK 1
- ⑥ PARALL
- ⑦ CARABINER
- ⑧ QUICKDRAW
- ⑨ CAMBUCKLE
- ⑩ SANGLE

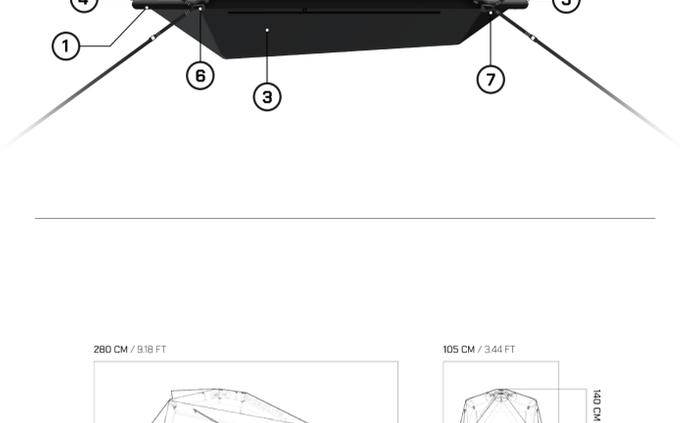

- x1
- + **AIR FRAME** : High-strength polyester (HT), TPU
- + **VALVES** : Airlock 1 / Airlock 2
- + **FLY / GROUND SHEET** : 2 layer, Nylon 30D, 10.000mm DWR, PU coated 5000g/m2/24h
- + **BED SHEET** : 100% Nylon 420D water-repellent
- + **INNER TENT** : 100% Polyester mesh
- + **ZIPPER** : #5 Waterproof ODIN® zippers
- + **PACK SIZE** : 40 x 22 x 22 cm [16 x 9 x 9 inches]
- + **WEIGHT** : 2.9 kg [6.39 lbs]

+ **Included** : Pegs, Repair kit, Guy lines, Pack sack




PARALL CARBN™

- + **Materiala** : 3K Carbon Fiber / Aluminium
- + **Weight** : 780 g / 1.7 lbs
- + **Max. Load** : 100 kg / 220 lbs



NFINITE STRAP™


- + **Carabiners** : Aluminium 12 Kn
- + **Cambuckles** : Aluminium 250 Kg
- + **Straps** : Security strap 25mm
- + **Weight** : 0.97 kg / 2.1 lbs

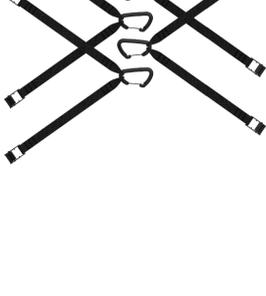

_FIRST INSTALL


01 INFLATE THE [AIR FRAME]

Choose the adapted valve for your pump and slightly inflate the [Air frame] so that it stands upright.

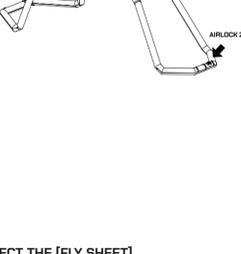


02 CONNECT THE [INNER TENT]

Place the [Inner tent] under the inflatable structure and clip each Z-Buckles (x8), as well as T-Bars (x8) to D-Rings (x8) associated.

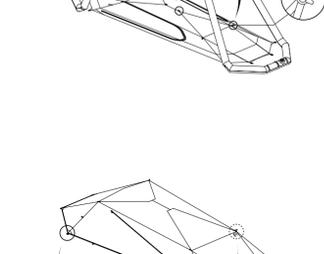


03 CONNECT THE [FLY SHEET]

Place the [Fly sheet] above the [Air frame] and snap them into the holes at the ends. Then insert the D-Rings (x4). Then clip the Z-Buckles (x8) at the [Air frame] base.

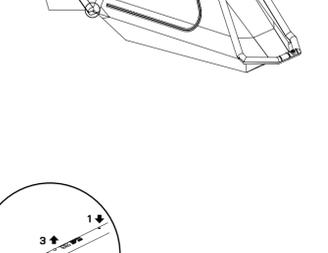

04 INSERT THE [PARALL CARBN]

Deploy the [Parall Carbn] by unlocking the Clips (x4) and snap them into the holes at the ends. Then insert the [Parall Carbn] into the hems of the tent at the ends of the bed, according to the corresponding length.

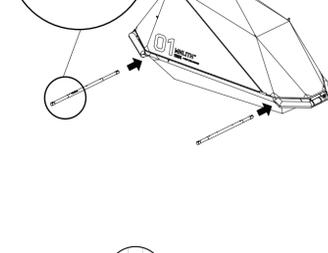

05 HANG THE [MONOLITH]


Attach the Straps (x2) with a lark's head knot to the upper attachment points.

Place the [Monolith] shelter in the center of the attachment points and pass each strap through the Cambuckles (x4), then the Carabiners (x4) in each of the end caps of the [Parall].



06 STABILISATION OF THE [MONOLITH]

Tie the straps Straps (x2) with a lark's head knot to the lower hanging points.

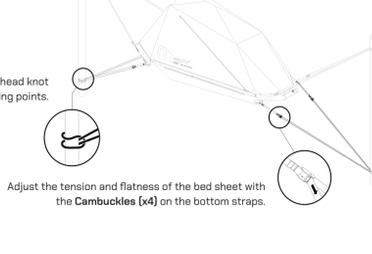

SET UP


Your camp is ready. Check the installation carefully before entering your [Monolith] and enjoy the experience.

00 PACKING THE [MONOLITH] SHELTER

Unlock the tension by pressing the Cambuckles (x8) until the tent touches the ground.

Detach the Carabiners (x4) from the [Parall Carbn] remove it from the hems of the bed, fold it up by pressing the clips.

NEVER USE THE TENT ONLY WITH THE TOP HANGING POINTS!

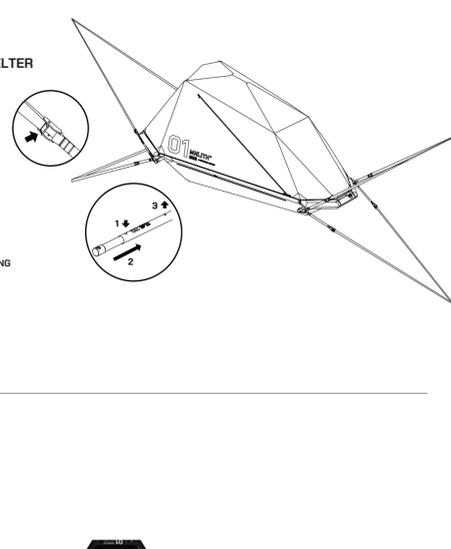

GUY LINES


In case of strong winds, pitch the tent on the ground and use the guy lines to secure the camp.

PACKING

This manual shows the first installation. It is not necessary to split each element again. You can organise the parts to optimise your next installation.

FOLDING

Folding advice

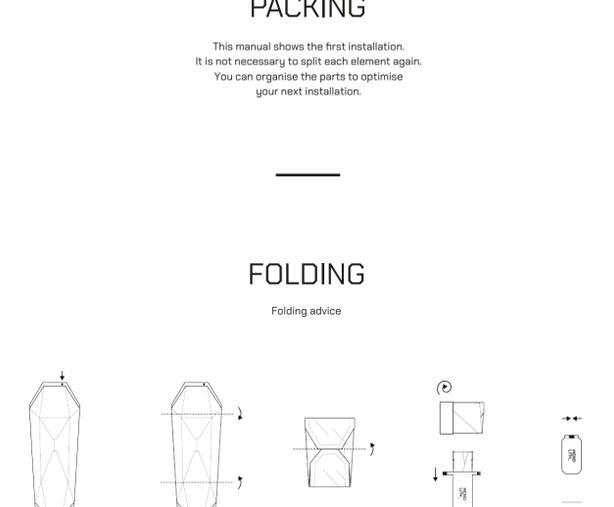

_POLICIES

• MAINTENANCE

Visually and by touch, inspect all components of your MONOLITH for structural damage before each use and dry the tent out entirely before storing it. The MONOLITH should be stored in a safe and dry environment.

• RETURNS

If a manufacturing defect occurs after one year of reasonable use*, the product may be returned for repair or exchange.

• SEVERE WEATHER CONDITIONS

The MONOLITH tent is not intended for use in stormy or dangerous conditions, such as thunderstorms, heavy rain, high winds. Do not use or stay in the MONOLITH tent in these conditions. Do not leave a MONOLITH tent exposed to storm conditions: take it down and store it. Leaving the MONOLITH hanging tent outside and setting it up in bad weather can lead to destruction and/or potential damage (warranty does not cover). If the MONOLITH tent is subjected to such conditions, its suspension system must be fully inspected before further use.

This policy does not cover damage caused by environmental conditions, adverse weather conditions or apocalyptic events.

CONTACT US

contact@exod.store

*with continuous use not exceeding 1 month.

_GENERAL TERMS AND CONDITIONS

The MONOLITH tent is designed for relaxing and sleeping/camping. Never jump in or on the tent. Do not use as a trampoline or swing. Do not attempt to use this product for any purpose other than its intended purpose. Never exceed the maximum load and height.

• WARRANTY

This warranty covers the functionality of the product under normal, intended use as specified in the brochure, including the website.

This warranty does not cover component failure resulting from improper or unwarranted use or negligent maintenance, use by the user of improperly sized or unhealthy trees, use of sharp objects, or fire near the tent or use outside the recommended maximum height or occupancy.

This warranty does not cover damage caused by environmental conditions, or by apocalyptic events. This policy will not be valid for products that are purchased from an unauthorized seller or secondary reseller.

Unauthorized and/or resold products are not protected by the rules of good quality and reliability of the original products sold by the authorized sellers.

If you buy from an unauthorized seller you may get a product that is counterfeit, stolen, or remanufactured and is detailed as new.

To claim the warranty you must show proof of purchase invoice of the product.

Apart from the conditions described above, the manufacturer as well as the sellers or resellers disclaim any responsibility and warranty for the product, its quality, value or use.

The manufacturer or dealers are not liable for any special, indirect or incidental damages in the event of a breach of the warranty agreement. This includes negligence even though all this information is known to the user, or failure to follow all guidelines, instructions and other information in this manual. Such non-compliance will invalidate the warranty.